

MOUNTING INSTRUCTIONS

1. UNSCREW THE BOLTS AS REQUIRED ON FRONT OF UNIT.
2. INSERT WEATHER SHIELD UNDER TOP COVER.
3. SECURE WEATHER SHIELD WITH BOLTS SUPPLIED WITH KIT.
4. REPEAT STEPS TO INSTALL SHIELD ON REAR OF UNIT.


WEATHERSHIELD TO MAKE ENCLOSURES NEMA 3R RATED

| * KVA | WEATHERSHIELD | ENCLOSURE WIDTH "B" | ENCLOSURE DEPTH "C" | DEPTH "3R-C" (WITH WEATHER-SHIELD) |
|--------------|---------------|---------------------|---------------------|------------------------------------|
| SINGLE PHASE | | | | |
| 15 | 421-0007-015 | 15.00" | 15.00" | 22.00" |
| 25 | 421-0007-017 | 17.00" | 17.00" | 24.00" |
| 37.5 | 421-0007-020 | 20.00" | 18.00" | 25.00" |
| 50 | 421-0007-022 | 22.00" | 20.00" | 27.00" |
| 75 | 421-0007-022 | 22.00" | 22.00" | 29.00" |
| 100 | 421-0007-022 | 22.00" | 24.00" | 31.00" |

3-PHASE

| | | | | |
|-------|--------------|--------|--------|--------|
| 15 | 423-0007-019 | 19.00" | 16.00" | 23.00" |
| 30 | 423-0007-022 | 22.00" | 17.00" | 24.00" |
| 45 | 423-0007-025 | 25.00" | 18.50" | 25.50" |
| 75 | 423-0007-027 | 27.00" | 21.00" | 28.00" |
| 112.5 | 423-0007-029 | 29.00" | 23.00" | 31.00" |
| 150 | 423-0007-033 | 33.00" | 26.00" | 34.00" |
| 225 | 423-0007-035 | 35.00" | 30.00" | 38.00" |
| 300 | 423-0007-035 | 35.00" | 30.00" | 38.00" |
| 500 | 423-0007-048 | 48.00" | 33.00" | 43.50" |
| 750 | 423-0007-052 | 52.00" | 40.00" | 58.00" |
| 1000 | 423-0007-066 | 66.00" | 44.00" | 62.00" |

* =FOR 150°C TEMPERATURE RISE UNITS.

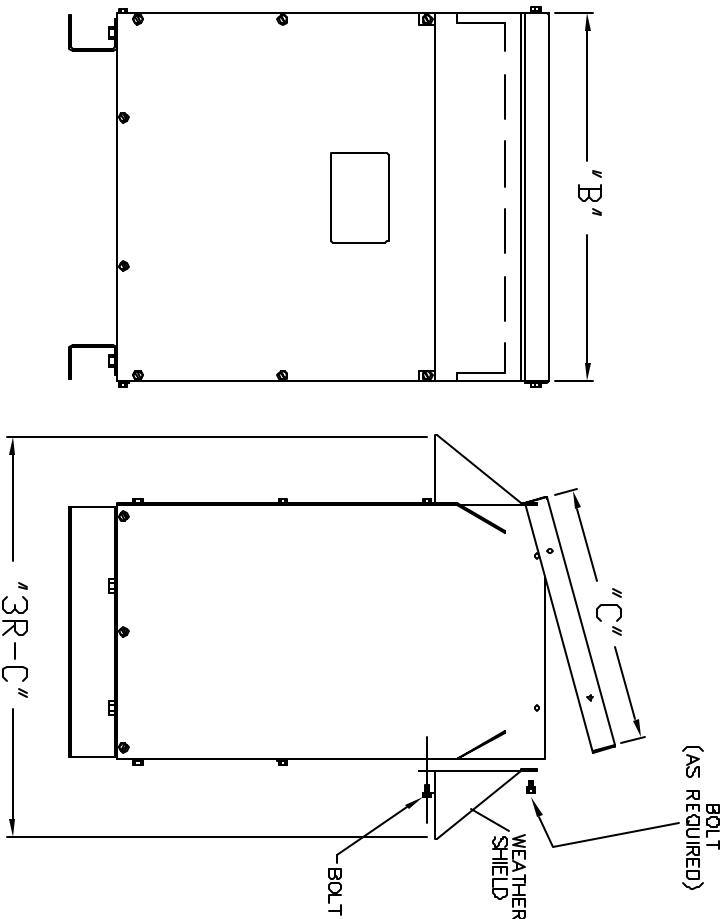

WEATHER SHIELD KIT
DIMENSIONAL DATA
"REV. A" "TP1"

DWG. NO. 004-0997-000

REV. A